

klangfeldt

6-oscillator synthesizer

Oscillator Slot 1

Oscillator Slot 2

Oscillator Slot 3

Oscillator Slot 4

Oscillator Slot 5

Oscillator Slot 6

- 01. BIT Saw single
- 02. BIT Saw sync
- 03. BIT Saw dual
- 04. BIT Triangle single
- 05. BIT Triangle dual
- 06. BIT Pulse 1 single
- 07. BIT Pulse 2 single
- 08. BIT Pulse 3 single
- 09. BIT Pulse 4 single
- 10. BIT Pulse 5 single
- 11. BIT Pulse 6 single
- 12. BIT Pulse 1 dual
- 13. BIT Pulse 2 dual
- 14. BIT Pulse 3 dual
- 15. BIT Pulse 4 dual
- 16. BIT Pulse 5 dual
- 17. BIT Pulse 6 dual
- 18. BIT Mix single
- 19. BIT Tines 1
- 20. BIT Tines 2
- 21. BIT Tines 3
- 22. BIT Tines 4
- 23. JX Saw single
- 24. JX Saw dual
- 25. JX Saw solo
- 26. JX Saw uni 1
- 27. JX Saw uni 2
- 28. JX Pulse single
- 29. JX Pulse dual
- 30. JX Pulse solo
- 31. JX Pulse uni 1
- 32. JX Pulse uni 2
- 33. JX Square single
- 34. JX Square dual
- 35. JX Square solo
- 36. JX Square uni 1
- 37. JX Square uni 2
- 38. JX SawSq uni
- 39. JX PulseSq s1
- 40. JX PulseSq s2
- 41. JX PulseSq s3
- 42. CS Saw single
- 43. CS Saw dual
- 44. CS Saw resonant 1
- 45. CS Saw triangle
- 46. CS PW triangle
- 47. CS Triangle x
- 48. CS PW 65
- 49. CS PW Mix 1
- 50. CS PW Mix 2
- 51. CS Noise
- 52. P61 Saw dual
- 53. P61 Saw Pulse
- 54. P61 Rect Pulse 1
- 55. P61 Rect Pulse 2
- 56. P61 Rect Saw
- 57. P61 Resonant Saw
- 58. P61 Resonant Sqr
- 59. SQ Saw 3 Osc
- 60. SQ Saw Formant
- 61. SQ Saw Fmt Pulse
- 62. SQ Saw Sync
- 63. SQ Saw Brass Voice
- 64. SQ Pulse 3 Osc
- 65. SQ Reed 3 Osc
- 66. SQ Bass 3 Osc
- 67. SQ Clav 3 Osc
- 68. SQ Digit1 3 Osc
- 69. SQ Digit2 3 Osc
- 70. SQ SineBrthMtl
- 71. SQ Square AM
- 72. SQ Square Sync
- 73. SQ String 3 Osc
- 74. FM EP 1
- 75. FM EP 2
- 76. FM EP 3
- 77. FM EP 4
- 78. FM EP 5
- 79. FM EP 6
- 80. FM Piano 1
- 81. FM Piano 2
- 82. FM Piano 3
- 83. FM Keys 1
- 84. FM Keys 2
- 85. P330 Piano 1
- 86. P330 Piano 2
- 87. P330 Piano 3
- 88. P330 E.Piano 1
- 89. P330 E.Piano 2
- 90. P330 Harpsichord
- 91. P330 Clavi
- 92. SPM Piano 1
- 93. SPM Piano 2
- 94. Electric Grand
- 95. Rock Piano 1
- 96. Modeled Piano 1
- 97. Modeled Piano 2
- 98. Modeled Piano 3
- 99. Drawbar 16' & 8'
- 100. Drawbar 16' & 4'
- 101. Drawbar 16' & 2'
- 102. Drawbar 16' & 1'
- 103. Drawbar 16'

- 104. BIT Saw single
- 105. BIT Saw sync
- 106. BIT Saw dual
- 107. BIT Triangle single
- 108. BIT Triangle dual
- 109. BIT Pulse 1 single
- 110. BIT Pulse 2 single
- 111. BIT Pulse 3 single
- 112. BIT Pulse 4 single
- 113. BIT Pulse 5 single
- 114. BIT Pulse 6 single
- 115. BIT Tines 1
- 116. P5 Saw dual
- 117. P5 Pulse 1 dual
- 118. P5 Pulse 2 dual
- 119. P5 Pulse 3 dual
- 120. P5 Triangle unisono
- 121. P5 Saw unisono
- 122. P5 Pulse unisono
- 123. P5 Sqr Tri Polymod
- 124. P5 Unison Polymod
- 125. P5 Snc Uni Polymod
- 126. JX Saw single
- 127. JX Saw dual
- 128. JX Saw Special ST
- 129. JX Saw uni 1
- 130. JX Saw uni 2
- 131. JX Pulse single
- 132. JX Pulse dual
- 133. JX Pulse solo
- 134. JX Pulse uni 1
- 135. JX Pulse uni 2
- 136. JX Square single
- 137. Trident Saw dual
- 138. Trident Square dual
- 139. Trident PW dual
- 140. Trident Brass
- 141. Trident Strings
- 142. Trident Ensemble
- 143. Trident Flanger
- 144. Trident Full
- 145. CS Saw single
- 146. CS Square single
- 147. CS Triangle dual
- 148. CS Saw feedback
- 149. CS PW feedback
- 150. CS SQ feedback
- 151. CS Saw LP HP
- 152. CS Saw resonant 2
- 153. CS Pulse reso
- 154. CS Pulse Noise
- 155. P61 Saw single
- 156. P61 Saw dual
- 157. P61 Rect single
- 158. P61 PW 1 single
- 159. P61 PW 2 single
- 160. P61 PW 3 single
- 161. P61 PW 4 single
- 162. SQ Saw single
- 163. SQ Bell1 3 Osc
- 164. SQ Bell2 3 Osc
- 165. SQ Bell Glint
- 166. SQ Chime
- 167. SQ Formant 3 Osc
- 168. SQ Grit 3 Osc
- 169. SQ Piano
- 170. SQ ElPiano 3 Osc
- 171. SQ Prime 3 Osc
- 172. SQ Synth1 3 Osc
- 173. SQ Synth2 3 Osc
- 174. SQ Synth3 3 Osc
- 175. SQ Voice1 3 Osc
- 176. SQ Voice2 3 Osc
- 177. FM EP 7
- 178. FM EP 8
- 179. FM EP 9
- 180. FM EP Synth
- 181. FM Wurli 1
- 182. FM Wurli 2
- 183. FM Piano 4
- 184. FM Piano 5
- 185. FM Piano 6
- 186. FM Keys 3
- 187. FM Keys 4
- 188. P330 Piano 4
- 189. P330 Piano 5
- 190. P330 Piano 6
- 191. P330 E.Piano 3
- 192. P330 E.Piano 4
- 193. P330 Vibraphone
- 194. SPM Mono Piano
- 195. SPM E.Piano
- 196. SPM Clav
- 197. Rock Piano 2
- 198. Modeled Dyno
- 199. Modeled Rhodes
- 200. Modeled Guitar 1
- 201. Modeled Guitar 2
- 202. Drawbar Full
- 203. Drawbar Full Harm
- 204. Drawbar Dual Harm
- 205. Drawbar Harmncs 1
- 206. Drawbar 8'

- 207. AX80 Saw Single
- 208. AX80 Saw Dual
- 209. AX80 Square Dual
- 210. AX80 Xmod 1
- 211. AX80 Xmod 2
- 212. AX80 Xmod 3
- 213. AX80 Xmod 4
- 214. AX80 Xmod 5
- 215. AX80 PWM X1
- 216. AX80 PWM X2
- 217. AX80 PWM dual
- 218. P5 Saw single
- 219. P5 Saw dual alt
- 220. P5 Saw dual 2
- 221. P5 Pulse 1
- 222. P5 Pulse 2
- 223. P5 Pulse 3
- 224. P5 Pulse 4
- 225. P5 Pulse 5
- 226. P5 Sync 1
- 227. P5 Sync 2
- 228. P600 Saw dual
- 229. P600 Pulse dual
- 230. P600 Uni Saw 1
- 231. P600 Uni Pulse 1
- 232. Trident Saw
- 233. Trident Square
- 234. Trident PWM dual
- 235. Trident Strings 16'
- 236. Trident Strings 8'
- 237. Trident Strings 4'
- 238. K3 Grand Piano 1
- 239. K3 Bell
- 240. K3 E.Piano 1
- 241. K3 Organ
- 242. K3 Digital Bell
- 243. K3 Hammered Tine
- 244. K3 Metallic Wave
- 245. K3 E.Piano 2
- 246. K3 Glocken
- 247. K3 Oriental Bell
- 248. K3 Grand Piano 2
- 249. MG Saw single
- 250. MG Triangle single
- 251. MG Pulse single
- 252. MG Square single
- 253. MG Quad Saw
- 254. MG Quad Saw Sync
- 255. MG Quad Pulse
- 256. MG Quad Pulse Sync
- 257. MG Sync 1
- 258. MG Sync 2
- 259. Trilogy Saw Sync
- 260. Trilogy Saw Dual
- 261. Trilogy Square sync
- 262. Trilogy Square dual
- 263. Trilogy Strings 1
- 264. Trilogy Strings 2
- 265. Trilogy Strings 3
- 266. Trilogy Organ
- 267. Trilogy Organ full
- 268. Juno PWM/Saw
- 269. Juno PW/Saw/Sub
- 270. Juno Square/Saw
- 271. Juno Saw/Noise
- 272. Juno Square/Noise
- 273. Juno Pulse/Noise
- 274. Juno Noise
- 275. S-100F Saw
- 276. S-100F Pulse
- 277. S-100F Resonant
- 278. SX Sawtooth
- 279. SX Sawtooth Noise
- 280. SX Square
- 281. SX Square Noise
- 282. SX Pulse 1
- 283. SX Pulse 2
- 284. SX Pulse Noise
- 285. SX PWM
- 286. SX PWM Noise
- 287. SX Resonant 1
- 288. SX Resonant 2
- 289. **Drumset 1**
- 290. Bright Bell
- 291. Pitch Noise 1
- 292. Modeled Strings
- 293. VCylinder 1
- 294. Drawbar Harmncs 2
- 295. Drawbar 4'

- 296. AX80 Saw Single
- 297. AX80 Saw Dual
- 298. AX80 Resonant 1
- 299. AX80 Resonant 2
- 300. AX80 Resonant 3
- 301. AX80 Resonant 4
- 302. AX80 Pulse 1
- 303. AX80 Pulse 2
- 304. AX80 PWM 1
- 305. AX80 PWM 2
- 306. AX80 PWM 3
- 307. P5 Saw single
- 308. P5 Saw dual alt
- 309. P5 Saw dual 2
- 310. P5 Pulse 1
- 311. P5 Pulse 2
- 312. P5 Pulse 3
- 313. P5 Pulse 4
- 314. P5 Pulse 5
- 315. P5 Sync 1
- 316. P5 Sync 2
- 317. P600 Polymod 1
- 318. P600 Polymod 2
- 319. P600 Polymod 3
- 320. P600 SwTrPu
- 321. Trident Saw
- 322. Trident Square
- 323. Trident PWM dual
- 324. Trident Strings 16'
- 325. Trident Strings 8'
- 326. Trident Strings 4'
- 327. K3 Grand Piano 1
- 328. K3 Bell
- 329. K3 E.Piano 1
- 330. K3 Organ
- 331. K3 Digital Bell
- 332. K3 Hammered Tine
- 333. K3 Metallic Wave
- 334. K3 E.Piano 2
- 335. K3 Glocken
- 336. K3 Oriental Bell
- 337. K3 Grand Piano 2
- 338. MG Saw single
- 339. MG Triangle single
- 340. MG Pulse single'
- 341. MG Square single
- 342. MG Quad Saw
- 343. MG Quad Saw Detune
- 344. MG Quad Sync ST
- 345. MG Quad Mix 1 ST
- 346. MG Sync 3
- 347. MG Sync 4
- 348. Trilogy SawString 1
- 349. Trilogy SawString 2
- 350. Trilogy SqrString 1
- 351. Trilogy SqrString 2
- 352. Trilogy Strings 1
- 353. Trilogy Strings 2
- 354. Trilogy Strings 3
- 355. Trilogy Organ
- 356. Trilogy Organ full
- 357. Juno Saw Chorus
- 358. Juno Square Chorus
- 359. Juno PW1 chorus
- 360. Juno PW2 chorus
- 361. Juno PW3 chorus
- 362. Juno PW4 chorus
- 363. Juno Noise
- 364. S-100F Saw
- 365. S-100F Pulse
- 366. S-100F Resonant
- 367. SX Sawtooth
- 368. SX Sawtooth Noise
- 369. SX Square
- 370. SX Square Noise
- 371. SX Pulse 1
- 372. SX Pulse 2
- 373. SX Pulse Noise
- 374. SX PWM
- 375. SX PWM Noise
- 376. SX Resonant 1
- 377. SX Resonant 2
- 378. **Drumset 2**
- 379. Fantasia
- 380. Pitch Noise 2
- 381. Modeled SawPulse
- 382. VCylinder 2
- 383. Drawbar Harmncs 3
- 384. Drawbar 2'

- 385. MKS Saw Chorus
- 386. MKS Saw Sub
- 387. MKS Saw Var 1
- 388. MKS Saw Var 2
- 389. MKS SP Noise
- 390. MKS Sub Low
- 391. PS20 Organ 1
- 392. PS20 Organ 2
- 393. PS20 Trumpet
- 394. PS20 String
- 395. PS20 Clarinet
- 396. PS20 Oboe
- 397. PS20 Piano
- 398. PS20 Harpsichord
- 399. PS20 Accordion
- 400. PS20 Vibraphone
- 401. P600 Saw single
- 402. P600 Triangle
- 403. P600 Tri Pulse 1
- 404. P600 Tri Pulse 2
- 405. P600 Saw Tri
- 406. SAP Saw detune
- 407. SAP SawSq sync 1
- 408. SAP SawSq sync 2
- 409. SAP Pulse sync 1
- 410. SAP Pulse sync 2
- 411. SAP Pulse sync 3
- 412. SAP Saw res 1
- 413. SAP Saw res 2
- 414. SAP Pulse lfo 1
- 415. SAP Pulse lfo 2
- 416. K3 Strings
- 417. K3 Stereo Strings
- 418. K3 E.Bass
- 419. K3 Oboe
- 420. K3 Brass I
- 421. K3 Stereo Brass
- 422. K3 Slap Bass
- 423. K3 Plucked String
- 424. K3 Classic Guitar
- 425. K3 Vox Humana
- 426. K3 Sharp Wave
- 427. MG Saw dual octave
- 428. MG Saw dual ST
- 429. MG Pulse dual ST
- 430. MG Triangle dual ST
- 431. MG Quad Saw ST
- 432. MG Quad Mix 2 ST
- 433. MG Sync 5
- 434. MG Sync 6
- 435. CZ 1plus1CH
- 436. CZ 1plus3CH
- 437. CZ 1plus4CH
- 438. CZ 1plus6CH
- 439. CZ 2plus4RCH
- 440. CZ 4plus4CH
- 441. CZ 7plus8RCH
- 442. CZ TM6688CH
- 443. CZ TM1315N
- 444. FM Heavy Brass
- 445. FM Trombone
- 446. FM Synth Horns
- 447. FM Crystal
- 448. FM Keys 5
- 449. FM Keys 6
- 450. FM Flute
- 451. FM Bass
- 452. FM Tubular
- 453. FM Bells 1
- 454. FM Bells 2
- 455. FM Orchestra
- 456. FM Strings 1
- 457. FM Strings 2
- 458. FM Sax
- 459. FM Synth 1
- 460. FM Synth 2
- 461. S-100F Fast Saw
- 462. S-100F Fast Pulse
- 463. S-100F Fast Noise
- 464. **Drumset 3**
- 465. Accordeon
- 466. Musette
- 467. Pipe Organ I
- 468. Pipe Organ II
- 469. Session Saxes
- 470. Celesta
- 471. Modeled Guitar 3
- 472. Blow Flute
- 473. Pitch Noise 3
- 474. VCylinder 3
- 475. Drawbar Harmncs 4
- 476. Drawbar 1'

- 477. MKS Pulsesem 1
- 478. MKS Pulsesem 2
- 479. MKS PWM Sub 1
- 480. MKS PWM Sub 2
- 481. MKS PWM Sub 3
- 482. MKS Sub Noise
- 483. PS20 Organ 1
- 484. PS20 Organ 2
- 485. PS20 Trumpet
- 486. PS20 String
- 487. PS20 Clarinet
- 488. PS20 Oboe
- 489. PS20 Piano
- 490. PS20 Harpsichord
- 491. PS20 Accordion
- 492. PS20 Vibraphone
- 493. P600 Saw single
- 494. P600 Triangle
- 495. P600 Tri Pulse 1
- 496. P600 Tri Pulse 2
- 497. P600 Saw Tri
- 498. SAP Saw detune
- 499. SAP SawSq sync 1
- 500. SAP SawSq sync 2
- 501. SAP Pulse sync 1
- 502. SAP Pulse sync 2
- 503. SAP Pulse sync 3
- 504. SAP Saw res 1
- 505. SAP Saw res 2
- 506. SAP Pulse lfo 1
- 507. SAP Pulse lfo 2
- 508. K3 Digi Harmonics
- 509. K3 Pipe Organ
- 510. K3 Wood Bass
- 511. K3 Resonant String
- 512. K3 Jazz Organ
- 513. K3 Harpsichord
- 514. K3 Trumpet
- 515. K3 Sax
- 516. K3 Square
- 517. K3 Stereo Square
- 518. K3 Sawtooth
- 519. K3 Stereo Sawtooth
- 520. K3 Sine
- 521. K3 Stereo Sine
- 522. K3 White Noise
- 523. K3 Custom 1
- 524. K3 Custom 2
- 525. K3 Custom 3
- 526. K3 Custom 4
- 527. CZ 1plus1
- 528. CZ 1plus6N
- 529. CZ TM1412
- 530. CZ TM3344
- 531. CZ TM3445R
- 532. CZ TM4536R
- 533. CZ TM5545R
- 534. CZ TM6626R
- 535. CZ TM7766R
- 536. KF Supersaw
- 537. KF Superpulse
- 538. KF Supersquare
- 539. KF Superstrings
- 540. KF Multiwave 1
- 541. KF Multiwave 2
- 542. KF Multiwave 3
- 543. KF Multiwave 4
- 544. KF Multiwave 5
- 545. KF Multiwave 6
- 546. FM Synth 3
- 547. FM Synth 4
- 548. FM Guitar 1
- 549. FM Guitar 2
- 550. FM Guitar 3
- 551. FM Keys 7
- 552. FM Keys 8
- 553. FM Strings 3
- 554. FM Bellstring
- 555. FM Organ 1
- 556. FM Organ 2
- 557. FM Organ 3
- 558. FM Organ 4
- 559. Bottle Blow
- 560. Pole Vox
- 561. Vocal 1
- 562. Vocal 2
- 563. Modeled Wind 1
- 564. Modeled Wind 2
- 565. Marcato
- 566. Strings
- 567. Drawbar Perc 1
- 568. Drawbar Perc 2